

Operation Guide 4706

CASIO®

Thank you for purchasing this CASIO watch. To ensure that it can provide you with the years of service for which it is designed, be sure to read this manual carefully and follow the instructions contained herein. Pay particular attention to the precautions at the end of this manual text.


- Your watch may differ somewhat from the one shown in the illustration.

Modes and Indicators

Selecting a Mode

Each press of (C) sounds a confirmation tone and cycles through available modes in the sequence shown below.

- The watch will revert to normal timekeeping automatically if you leave it in the e-DATA MEMORY Mode without performing any operation for about two or three minutes.

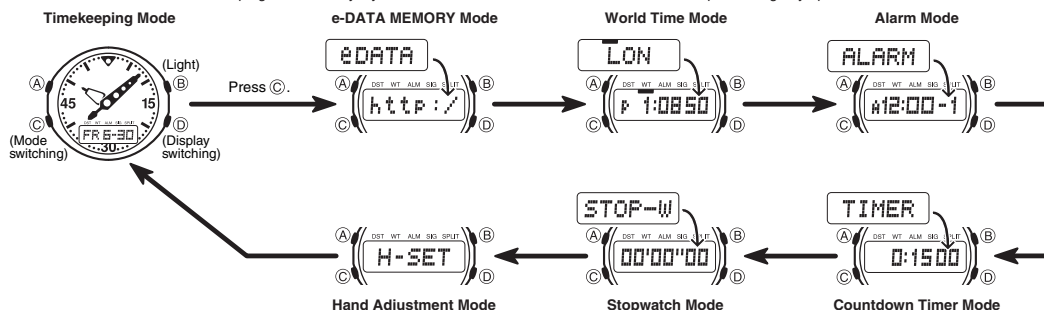


Days of the Week

SU: Sunday, MO: Monday, TU: Tuesday, WE: Wednesday, TH: Thursday, FR: Friday, SA: Saturday

Switching between Display Screens

In the Timekeeping Mode, each press of (D) toggles the digital display contents as shown below.

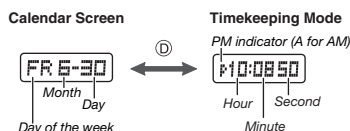

Illumination



Pressing (B) in any mode (except when a setting screen with a flashing setting is on the display) illuminates the face of the watch for about two seconds for easy reading in the dark.

Important!

- Illumination may be difficult to see under bright sunlight.

- If you press any button besides (B), or if an alarm or other beeper operation starts while the face is illuminated, illumination will turn off.

Using e-DATA MEMORY

Use (C) to enter the e-DATA MEMORY Mode.

 
You can use the e-DATA MEMORY Mode to store e-mail addresses, Web site URLs, and other information for instant recall whenever you need it.

- The maximum number of records that can be stored depends on the number of characters contained in each record.
- If each record contains 63 characters, you can store up to five records. Note that 63 is the maximum number of characters allowed in one record.
- If each record contains seven characters, you can store up to 40 records. Note that 40 is the maximum number of records, even if each record contains fewer than seven characters.
- When you enter the e-DATA MEMORY Mode, the record displayed when you last exited the mode appears first.
- If you password protect your data, a password input screen will appear first whenever you enter the e-DATA MEMORY Mode. In this case, data will not be viewable unless the correct password is entered first.
- See "Using a Password to Protect Data" for information about password protection of data.

To search for e-DATA MEMORY data


- In the e-DATA MEMORY Mode, press (D) to scroll through the data record-by-record.
- Holding down (D) will scroll the records at high speed.
- As shown in the example below, a screen showing remaining e-DATA MEMORY and a password registration screen appear following the e-DATA MEMORY records. If there is no data currently in e-DATA MEMORY, only the remaining memory and password registration screens appear.

Example: When there are three e-DATA MEMORY records




Reading the e-DATA MEMORY Mode Digital Display Screens

 Record Screens




- If a record contains more than five characters, the characters will scroll from right to left. The end of the record will be indicated by the (A) mark.
- Press (A) to pause right-left scrolling. Press (A) again to resume scrolling.

 Remaining Memory Screen



- This screen will show "100%" when there are no records in memory and "0%" when memory is full.

 Password Registration Screen



- This screen will show "SET" to indicate that there is no password currently registered.
- If there is a password, this screen will show "CHANGE".

To create a new e-DATA MEMORY record

- In the e-DATA MEMORY Mode, use (D) to display the remaining memory screen.
 - If memory is full, delete one or more records you no longer need to make room for the new data. See "To delete record data" for more information.
- Hold down (A) for about two seconds until the display changes to a data input field with the flashing cursor at the first character position. This is the data input screen.
- Use (D) (+) and (B) (-) to scroll through characters at the current input position.
 - Holding down either button scrolls at high speed.
- When the character you want is at the current cursor position, press (C) to move the cursor one character to the right.

Supported Characters

- Lower Case Alpha: a to z
- Upper Case Alpha: A to Z
- Numerals: 0 to 9
- Symbols: * _ @ ? / # % . : ; ' , & = + ()

Repeat steps 3 and 4 as many times as necessary to enter all of the characters for the record you are creating.

- When the record data is the way you want, press (A) to exit the data input screen.
 - The watch also will exit the input screen automatically if you do not perform any operation for about two or three minutes.
 - If you want to create another record, repeat steps 1 through 5 above.
 - Records are stored in the same sequence they are input.

To edit an e-DATA MEMORY record

1. In the e-DATA MEMORY Mode, use **(D)** to scroll through records and display the one you want to edit.
 2. Hold down **(A)** for about two seconds until the flashing cursor appears at the first character of the record. This is the data editing screen.
 3. Use **(C)** to move the cursor to the location of the character you want to change, and then use **(D)** and **(B)** to scroll through characters until the one you want to change to is displayed.
 4. When the record is the way you want, press **(A)** to exit the data editing screen.
- The watch also will exit the editing screen automatically if you do not perform any operation for about two or three minutes.

To delete record data

1. In the e-DATA MEMORY Mode, use **(D)** to scroll through records and display the one whose data you want to delete.
 2. Hold down **(A)** for about two seconds until the flashing cursor appears at the first character of the record. This is the data editing screen.
 3. Press **(D)** and **(B)** at the same time.
 - This causes "CLR" to appear on the display as the record is deleted.
 - After you delete the data, the record's blank data input screen will appear. You can enter new data into the record, if you want.
 4. Press **(A)** to exit the data editing screen.
- The watch also will exit the editing screen automatically if you do not perform any operation for about two or three minutes.
 - Deleting a record's data deletes the record, and causes and records following it to shift upwards.

Using a Password to Protect Data

You can register a password, which is a 4-digit number. Once you do, no one will be able to view your data unless they enter the correct password.

To register a password

1. In the e-DATA MEMORY Mode, use **(D)** to display the password registration screen shown nearby.
 2. Hold down **(A)** for about two seconds until the first digit of the password starts to flash. This is the password registration screen.
 - If you need to cancel password registration, press **(A)** again to exit the password registration screen.
 - The watch also will exit the password registration screen automatically if you do not perform any operation for about two or three minutes.
 3. Use **(D)** (+) and **(B)** (-) to scroll through numbers at the current flashing digit.
 - Holding down either button scrolls at high speed.
 4. When the number you want is at the flashing digit, press **(C)** to move the cursor one digit to the right.
- Supported Characters
- Numerals: 0 to 9
- Repeat steps 3 and 4 as many times as necessary to enter all of the digits of the password.

 
5. After entering all four digits for the password, press **(C)** to register the password and exit the password registration screen.
- The password you enter will not be registered unless you press **(C)**.
 - After registering a password, a password input screen will appear whenever you enter the e-DATA MEMORY Mode from another mode.

Important!

- If you forget your password, you will not be able to access your e-DATA MEMORY Mode records. Be sure to keep a separate written record of your password in a safe place for reference when required.


To access the e-DATA MEMORY Mode with a password

If you password protect your data, a password input screen will appear first whenever you enter the e-DATA MEMORY Mode. In this case, data will not be viewable unless the correct password is entered first.



Password Input Screen.
* Appears only when a password is registered.

 1. If the password input screen appears after you enter the e-DATA MEMORY Mode, perform steps 3 and 4 under "To register a password".
 - If you need to cancel password input, press **(A)** again to exit the password input screen.




2. After entering all four password digits, press **(C)**.
 - "OK!" will appear on the display and e-DATA MEMORY data will appear if the password matches.
 - If the password does not match, "ERR" will appear, and then the password input screen will reappear. Enter the correct password.

Changing the Password

You can use the following procedure to change a previously registered password. Changing the password does not affect any of the data currently in memory.

To change the password

 1. Use the procedure under "To access the e-DATA MEMORY Mode with a password" to enter the e-DATA MEMORY Mode.
2. Use **(D)** to display the password registration screen shown nearby.
3. Hold down **(A)** for about two seconds until the first digit of the password starts to flash. This is the password editing screen.
 - If you need to cancel password editing, press **(A)** again to exit the password editing screen.
 - The watch also will exit the editing screen automatically if you do not perform any operation for about two or three minutes.
4. Perform steps 3 and 4 under "To register a password" to enter a new password.



5. After entering all four password digits, press **(C)**.
 - This will exit the editing screen.

To delete the password and unprotect data

1. Use the procedure under "To access the e-DATA MEMORY Mode with a password" to enter the e-DATA MEMORY Mode.
2. Use **(D)** to display the password registration screen shown nearby.
3. Hold down **(A)** for about two seconds until the first digit of the password starts to flash. This is the password editing screen.
 - The watch also will exit the editing screen automatically if you do not perform any operation for about two or three minutes.
4. Press **(D)** and **(B)** at the same time to delete the password.
 - This causes "CLR" to appear on the display as the password is deleted, which unprotects the data.


World Time

Use **(C)** to enter the World Time Mode.

World time lets you display the current time in any one of 27 cities (29 time zones) around the world and Greenwich Mean Time (GMT).

- Entering the World Time Mode will display the city code that was displayed the last time you exited the World Time Mode.
- After you configure your Home City code and time, offsets are used to set the times in other World Time zones automatically.
- The seconds count in the World Time Mode is synchronized with the Timekeeping Mode seconds count.
- The same 12-hour/24-hour format you select for the Timekeeping Mode time is also used for World Time cities.

To search for a city

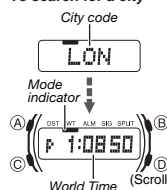

In the World Time Mode, press **(D)** to scroll through city codes.

A short while after a city code appears, the display will change to show the current time in that city.

- Holding down **(D)** scrolls at high speed.
- If the currently selected time zone does not have a city code, the GMT offset appears instead of the city code.

Using Summer Time (DST)

Summer time, or Daylight Saving Time (DST) as it is called in some countries, calls for setting clocks ahead one hour during the summer season. Note that the use of summer time depends on the country and even the local area.

To select standard time or daylight saving time

1. In the World Time Mode, use **(D)** to display the city code whose setting you want to change.
 2. Hold down **(A)** for about two seconds to toggle between summer time (DST indicator displayed) and standard time (no DST indicator).
- Selecting summer time causes the time setting to advance by one hour.
 - You can select summer time or standard time independently for each World Time Mode city.
 - You cannot change the summer time/standard time setting for the GMT (Greenwich Mean Time) zone.

World Time City Code List

City code	City Name	UTC Offset	Applicable Cities
---		-11	Pago Pago
HNL	Honolulu	-10	Papeete
ANC	Anchorage	-9	Nome
LAX	Los Angeles	-8	San Francisco, Las Vegas, Seattle
DEN	Denver	-7	El Paso, Edmonton
CHI	Chicago	-6	Houston, Mexico City
NYC	New York	-5	Montreal, Miami, Boston
CCS*	Caracas	-4	Santiago
RIO	Rio de Janeiro	-3	Sao Paulo, Buenos Aires
---		-2	
---		-1	Azores
GMT		0	Greenwich Mean Time
LON	London	0	Dublin
PAR	Paris	+1	Rome, Madrid, Frankfurt
CAI	Cairo	+2	Athens, Helsinki, Beirut
JRS	Jerusalem		
JED	Jeddah	+3	Kuwait, Moscow
THR	Tehran	+3.5	
DXB	Dubai	+4	Abu Dhabi
KBL	Kabul	+4.5	
KHI	Karachi	+5	
DEL	Delhi	+5.5	
DAC	Dhaka	+6	
RGN	Yangon	+6.5	
BKK	Bangkok	+7	Jakarta, Hanoi
HKG	Hong Kong	+8	Singapore, Kuala Lumpur, Beijing, Taipei, Manila
TYO	Tokyo	+9	Seoul, Pyongyang
ADL	Adelaide	+9.5	
SYD	Sydney	+10	Guam
NOU	Noumea	+11	Port Vila
WLG	Wellington	+12	Christchurch

- The contents of the above table are current as of June 2005.
- Time differentials in the above table are in accordance with Universal Time Coordinated (UTC).
- The rules governing offsets and summer time are determined by each individual country.
- *In December 2007, Venezuela changed its offset from -4 to -4.5. Note, however, that this watch displays an offset of -4 (the old offset) for the CCS (Caracas, Venezuela) city code.

Using the Alarm and Hourly Time Signal

Use (C) to enter the Alarm Mode. Your watch has five alarms, which can be configured independently of each other. The watch beeps for about 20 seconds when an alarm time is reached. The Hourly Time signal causes the watch to beep every hour on the hour.

- Alarms and the hourly time signal all operate in accordance with the digital time of the currently selected Home City.

To set an alarm time

Alarm number

1. In the Alarm Mode, use (D) to cycle through the alarm screens in the sequence shown below until the one you want to set is displayed.

2. Hold down (A) for about two seconds until the hour digits of the alarm time start to flash.

- The currently displayed alarm will turn on automatically at this point, which is indicated by the ALM indicator appearing on the display.

3. Use (C) to move the flashing between settings as shown below.

4. Use (D) (+) and (B) (-) to change the flashing setting.

- Holding down either button scrolls at high speed.

 
Repeat steps 3 and 4 to set the alarm time you want.

- When setting the hour, make sure that AM (A) or PM (P) is specified correctly when using 12-hour timekeeping, or that the correct 24-hour time is specified.
- The same 12-hour/24-hour format you select for the Timekeeping Mode time is also applied in the Alarm Mode.
- After the setting is the way you want, press (A) to exit the setting screen.
- The watch also will exit the editing screen automatically if you do not perform any operation for about two or three minutes.


To turn an alarm or the hourly time signal on or off

- In the Alarm Mode, use (D) to display the screen for an alarm or for the hourly time signal.
 - Press (A) to toggle the alarm or hourly time signal on or off.
- Turning on an alarm causes the ALM indicator to appear on the display. Turning on the hourly time signal causes the SIG indicator to appear.

Hourly Time Signal Screen



Alarm Screen

 

To stop the alarm beeper

Press any button.

To test the alarm

In the Alarm Mode, hold down (D) for about two seconds to sound the alarm.

Using the Countdown Timer

Use (C) to enter the Countdown Timer Mode. You can set the start time of the Countdown Timer in units of one minute in the range of 1 minute to 24 hours. The watch beeps for 10 seconds when the end of the countdown is reached.

To set the Countdown Timer start time

- In the Countdown Timer Mode, hold down (A) for about two seconds until the hour digits of the start time start to flash. This is the setting screen.
 - Use (C) to move the flashing between settings as shown below.
 - Use (D) (+) and (B) (-) to change the flashing setting.
- Repeat steps 2 and 3 to set the Countdown timer you want.
- To configure the setting to countdown 24 hours, set the start time as 0:00.
 - After the setting is the way you want, press (A) to exit the setting screen.

- The watch also will exit the setting screen automatically if you do not perform any operation for about two or three minutes.

To use the Countdown Timer

- In the Countdown Timer Mode, press (D).
- Each press of (D) starts or stops the countdown.
 - The time is counted down in one-second steps.
 - Pressing (A) while the countdown is stopped will reset to the countdown start time.
- Pressing (D) again while the timer countdown is stopped will restart the countdown.

Time Up Alert

The watch beeps for 10 seconds when the end of the countdown is reached.

To stop the time up alarm

Press any button.

Using the Stopwatch

Use (C) to enter the Stopwatch Mode. The stopwatch measures elapsed time in units of 1/100 second up to 59 minutes, 59.99 seconds (60 minutes). When the maximum limit is reached, the elapsed time returns to zero automatically and timing continues from there.

To start or stop an elapsed time operation

- In the Stopwatch Mode, press (D) to start and stop elapsed time measurement.
- Pressing (A) while an elapsed time operation is in progress will freeze the current split time on the display and continue timing of the next split internally. This is indicated by the SPLIT indicator on the display.
 - Changing to another mode while a split time is displayed cancels the split time operation.
- Pressing (A) while timing is stopped resets the stopwatch to all zeros.

To measure elapsed time



Cumulative Elapsed Time Measurement

Pressing (D) to restart the stopwatch without resetting it to all zeros causes the elapsed time measurement to resume from where it was last stopped.

To measure split times

Start → Split → Release split → Stop → Reset

Split Time Screen



To time 1st and 2nd place finishers

Start → 1st Finisher (Displays time of 1st finisher.) → 2nd Finisher (Second runner finishes.) → Displays time of 2nd finisher. → Reset

 
Configuring Time and Date Settings

Perform the procedures in this section in the Timekeeping Mode. You should use these procedures to adjust the current time and date settings after having the battery replaced, etc.

- Whenever you adjust the digital time setting, always be sure to adjust the analog time setting as well.

To adjust the digital time and date (for your Home City)

- In the Timekeeping Mode, hold down (A) for about two seconds until the seconds digits start to flash on the digital display. This is the setting screen.
- To restart the seconds count from 00, press (D) on a time signal from a radio, TV, etc.
 - Pressing (D) while the seconds count is in the range of 30 to 59 resets it to 00 and adds 1 to the minutes.



- Press (C) to advance to the summer time/standard time setting screen.
 - The current setting (DST ON or DST OFF) will be flashing on the display.
 - OFF: Standard Time
 - ON: Summer time (Daylight Saving Time)
- Press (D) to toggle the setting between standard time (DST OFF) and summer time (DST ON).
- Press (C) advance to the Home City setting screen.
 - The currently selected city code will be flashing on the screen.
- Use (D) (Eastward) and (B) (Westward) to scroll through the city codes until the one you want to use as your Home City is displayed.
 - Holding down either button scrolls at high speed.
 - Be sure to select your Home City before adjusting the time setting.
 - See the "World Time City Code List" for a complete list of city codes.
- Press (C) to select the time and date settings as described below, and adjust them as required.

- Use (D) (+) and (B) (-) to change the currently flashing setting.
- Holding down either button changes the setting at high speed.
- While the 12/24-hour timekeeping setting is selected, press (D) to toggle the timekeeping format between 12-hour ("12H" displayed) and 24-hour ("24H" displayed).
- When setting the hour, make sure that AM (A) or PM (P) is specified correctly when using 12-hour timekeeping, or that the correct 24-hour time is specified.
- You can set a year in the range of 00 (2000) to 39 (2039). The day of the week is set automatically in accordance with the date you set. The watch's full auto calendar makes adjustments for leap years and month lengths automatically. Because of this, there should be no need to change the date setting again, except after having the watch's battery replaced.
- When all the settings are the way you want, press (A) to exit the setting screen.
- The watch also will exit the setting screen automatically if you do not perform any operation for about two or three minutes.

Adjusting the Analog Time Setting

You can use the Hand Adjustment Mode to adjust the analog time manually when it does not match the digital time.

- Use (C) to enter the Hand Adjustment Mode.
- Hold down (A) for about two seconds until the current time starts to flash on the digital display. This is the setting screen.
- Press (D) to move the minute hand forward by 20 seconds.
 - Holding down (D) will advance the hands at high speed. Note that hands can be moved forward only.



- You can start high-speed forward hand movement by holding down (D) as you press (B).
- Press any button to stop high-speed hand movement.
- High-speed hand movement also will stop automatically when the hands complete one full 12-hour revolution.
- After the setting is the way you want, press (A) to exit the setting screen.
- The watch also will exit the setting screen automatically if you do not perform any operation for about two or three minutes.
- Taking too long to adjust the hand positions can cause the analog setting to be a bit behind. If this happens, perform the above procedure again to advance the minute hand by one or two 20-second steps.

Specifications

Accuracy: Within ±15 seconds average per month

Basic Functions:

Normal timekeeping screen: Analog: Hour, minute (two hands)
Digital: Hour, minute, second, a.m.
(A)p.m. (P)/24-hour timekeeping
Date Time Screen: Month, day, day of the week, full auto calendar (2000 to 2039)

e-DATA MEMORY Mode: Storage of mail addresses, Web site addresses, and other data

- 63 characters per record: 5 records max.
- 7 characters per record: 40 records max.

Password protection

World Time: Current time in 29 time zones (27 cities) around the world; GMT display; summer/standard time

Alarm:

Daily Alarms: 5
Setting Units: Hour, minute
Beeper: 20 seconds
Hourly time signal: Beeps every hour on the hour

Countdown Timer:

Setting Unit: 1 minute
Countdown Unit: 1 second
Countdown range: 24 hours
10-second beeper when the end of the countdown is reached

Stopwatch:

Measuring unit: 1/100 second
Measurement range: 59 minutes, 59.99 seconds (60 minutes)
Measurement functions: Elapsed time; cumulative elapsed time; split times; first/second place finishers

Other: Auto return to regular timekeeping; summer/standard time; 12/24 hour timekeeping; alarm test; LED light

Battery: CR1616

Approximate Battery Life: 2 years (20 seconds beeper operation, 2 seconds light operation per day)

- Approximate battery life can be shortened by more frequent light operation.
- 6 seconds light operation per day: 17 months
- 10 seconds light operation per day: 12 months